

# Gator Grabber™



Assembly Instructions

## Contents:

- A • Partially assembled Gator Grabber
- B • Telescoping Gator Grabber arm w/label
- C • Telescoping Gator Grabber arm
- D • Assembly hardware


## Tools Required:

- 1 • Standard sized Philips head screw driver
- 1 • Small adjustable wrench or pliers

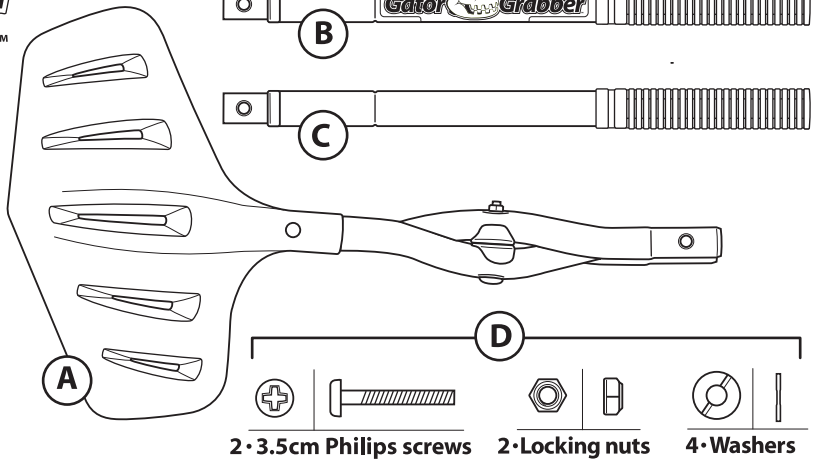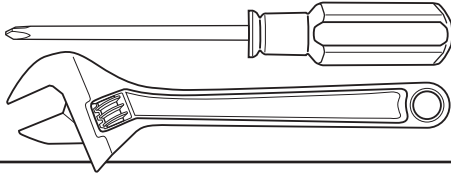


2 • 3.5cm Philips screws    2 • Locking nuts    4 • Washers

## Directions:

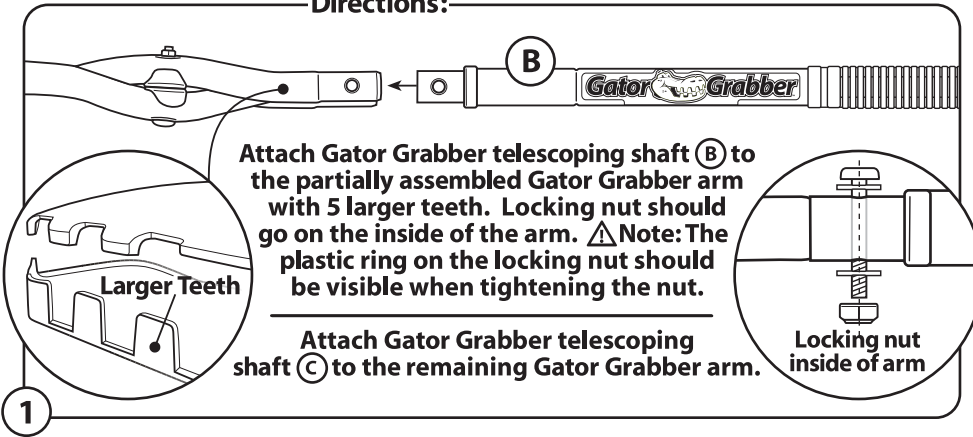

## Operation:

The two telescoping shafts lock and unlock in opposite directions from each other. A roughly 45° twist will lock or unlock the shafts.

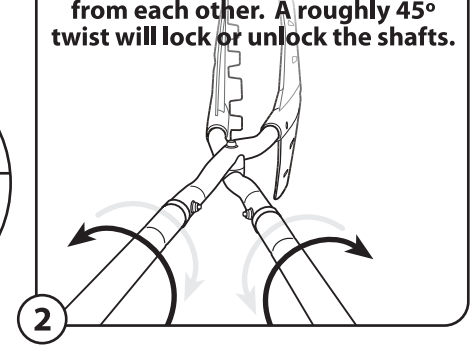

# Gator Grabber™



Assembly Instructions

## Contents:

- A • Partially assembled Gator Grabber
- B • Telescoping Gator Grabber arm w/label
- C • Telescoping Gator Grabber arm
- D • Assembly hardware


## Tools Required:

- 1 • Standard sized Philips head screw driver
- 1 • Small adjustable wrench or pliers

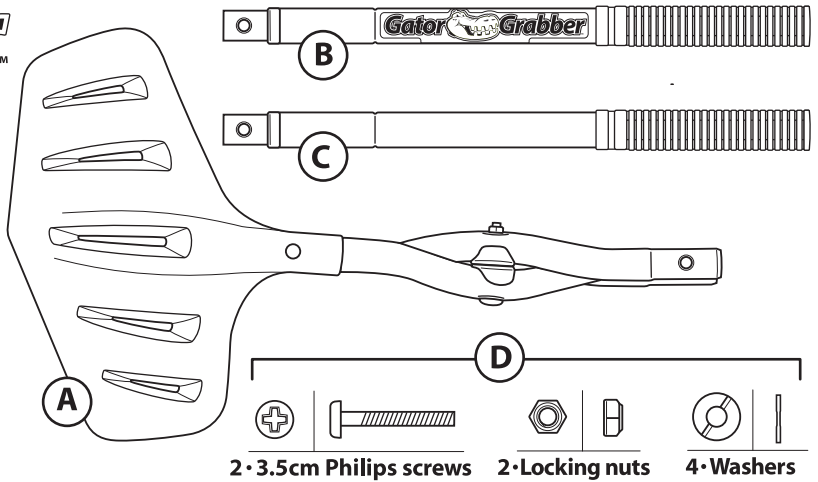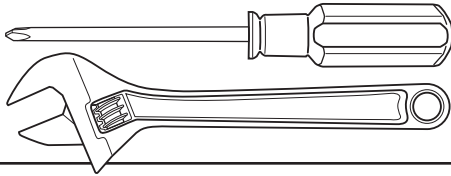

2 • 3.5cm Philips screws    2 • Locking nuts    4 • Washers

## Directions:

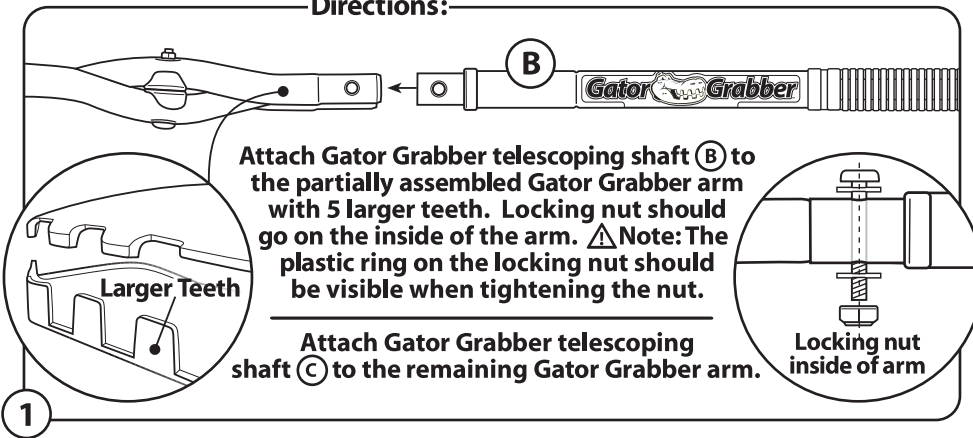

## Operation:

The two telescoping shafts lock and unlock in opposite directions from each other. A roughly 45° twist will lock or unlock the shafts.

