


1	Grass cutter blade
2	Blade release button
3	Safety lock button
4	On/Off trigger switch
5	Shrub trimming blade
6	Blade guards
7	Battery charger
8	Rotating angle button

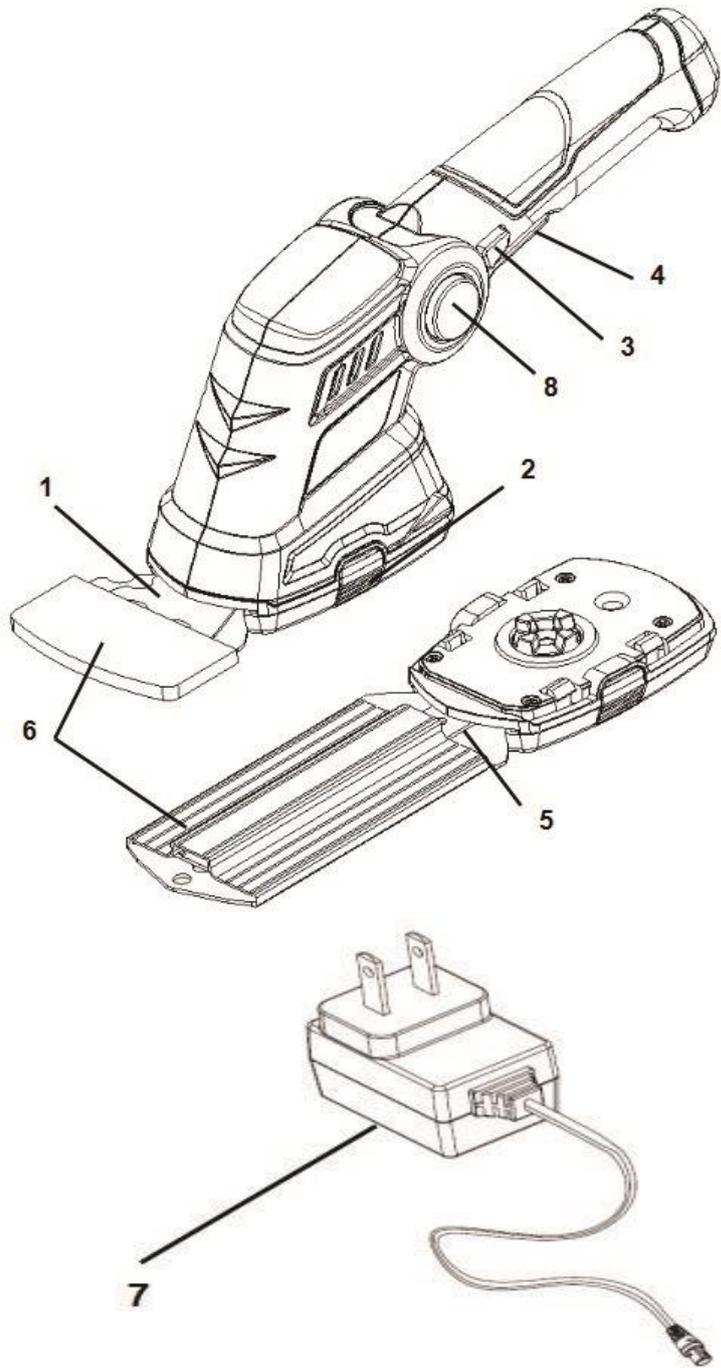

## GENERAL INSTRUCTIONS

## PACKING LIST

- Shear with Grass Cutter Blade Assembled
- Shrub Trimming Blade
- Blade Guards
- Battery Charger
- Owner's Manual

## UNPACKING

Carefully remove the product from the box. Make sure that all items listed in the packing list are included.

Inspect all items carefully to make sure no breakage or damage occurred during shipping.


Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.



**WARNING:** If any parts are damaged or missing please do not operate this product until the parts are replaced. Failure to heed this warning could result in serious personal injury. Call our customer service help line at 1-800-618-7474 for assistance.

## CHARGING PROCEDURE

1. Insert the charger cable into the charging inlet on the tool.

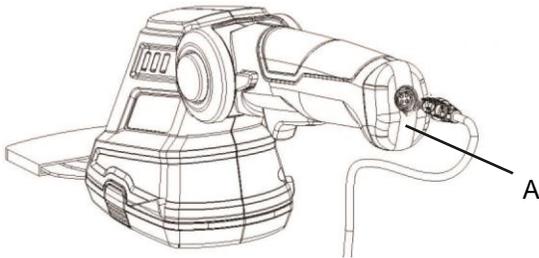

2. Make sure the wall outlet in your home is normal household voltage (AC120V, 60 Hz). Insert the battery charger plug into the wall outlet.
3. The red LED (A) charging indicator lights up to tell you that the battery pack is on charge. The battery is fully charged when the red LED charging indicator is no longer lit.

- During the charging process, it is normal for the handle of the tool to warm up.
- When not using the tool for extended periods, disconnect the battery charger from the socket.
- When the trimming shears are charging, you must not use them.
- Only charge the battery between 0°-37.8°C (32°-100°F).
- After prolonged use, allow the battery to cool down before recharging.

## STARTING AND STOPPING

### Starting:

1. Push the safety lock button and press the on/off trigger switch at the same time.
2. Release the safety lock button.

### Stopping:

1. Release the on/off trigger switch.

## OPERATING INSTRUCTIONS

This product is intended for light trimming of shrubs, hedges and lawn edges. Please note that this tool is not designed for commercial, trade, or industrial use. Only use this product for the purpose specified in these instructions. Any other use will void the warranty.

## **GRASS CUTTER BLADE**

Use the grass cutter blade for cutting the edges of lawns and small areas of grass in private gardens and hobby areas.

The grass cutter blade is not intended for cutting hedges or chopping material up for composting.

### **Edging**

Guide the tool along the edge of the lawn.

After use install the blade guard.

### **Tips:**

- Do not force the unit through dense growth, and if the blades slow down, reduce your speed.
- Avoid trimming too close to dirt, sand or gravel, as this could dull the blades and reduce the cutting efficiency.
- Do not allow the blade to contact paved surfaces, stones or garden walls, as this will rapidly wear down the blade.

## **SHRUB TRIMMING BLADE**

Use the shrub trimming blade for trimming and shaping individual bushes, shrubs, and climbing plants in private domestic and hobby gardens.

The shrub trimming blade is not intended for cutting grass / edging.

### **Cutting shrubs**

- Before using, check the shrubs for foreign objects e.g. wire, etc.
- When using the tool hold it away from yourself and stand in a secure position with your weight evenly balanced on both feet.
- When cutting, move steadily along the line of cut, so that stems are fed directly into the cutter blades.
- After use, install the blade guard.